

# Using adjustment screws on hinges


What if my vanity door(s) are spaced too far apart, or are unlevel?

It is not uncommon for doors to shift slightly during the shipping process. Butt doors (side by side doors that meet in the middle) may have a gap, or single doors may seem tilted, or appear to be positioned incorrectly.




## SIDE ADJUSTMENT

Turn front screw counter-clockwise to move door to the left, clockwise to move door to the right.  
Range = 1/8" (3mm)

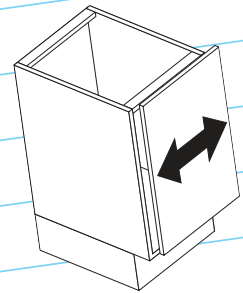

## HEIGHT ADJUSTMENT

Loosen center screw on all hinges. Adjust door to position and tighten screws.  
Range = 1/4" (6mm)

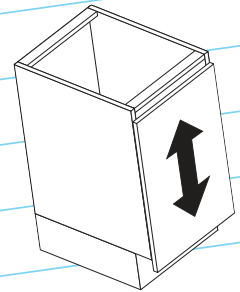

## DEPTH ADJUSTMENT

Turn back screw counter-clockwise to increase door gap, clockwise to decrease.  
Range = -1/32" (1mm)  
+ 3/32" (2mm)

